


Wood Locating Diagram 21'4" Boston Whaler Outrage

Locates wood molded into the hull for fastening accessories

DATE	64	7	7
TIME	6:27	6:00	6:00
BOSTON WHALER, INC.			
Buckhead, Mass. 01370			
NAME	62778	600	600

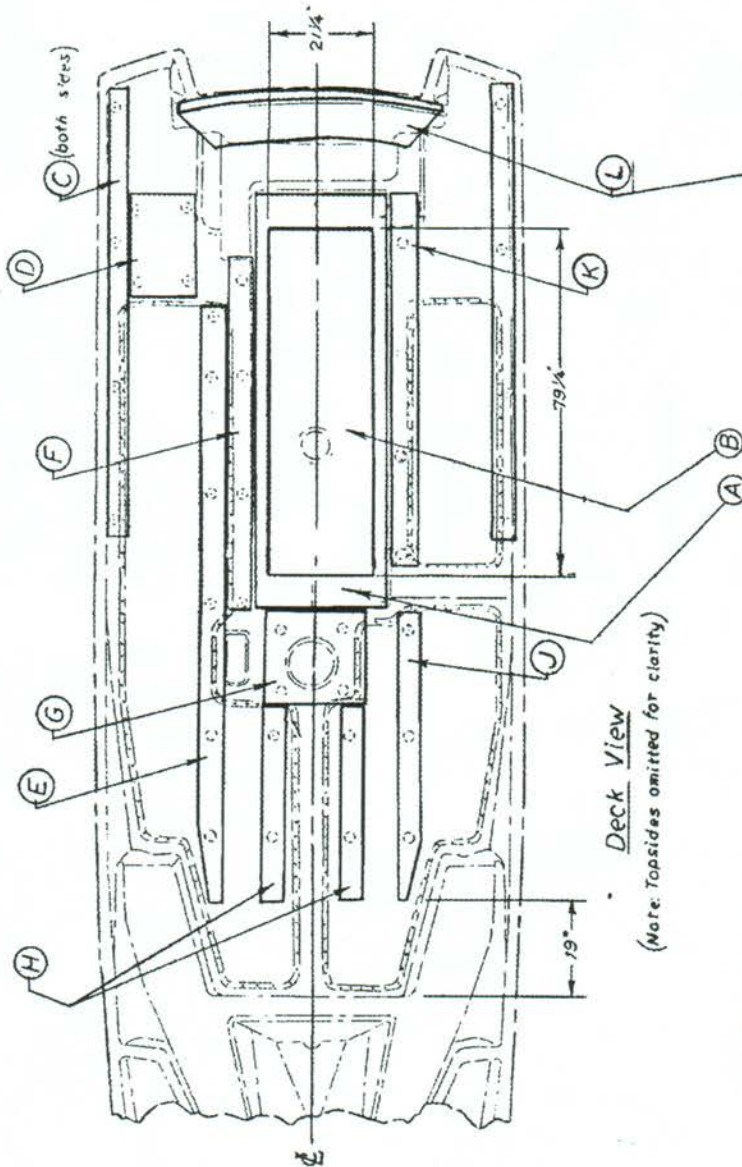

Deck View
(Note: Topsides omitted for clarity)

CAUTION!!
Do not drill into fuel tank.
Within the fuel tank cover
areas (A) and (B) drill no deeper
than 1/2"



Transom View

Wood has been inserted in the following places
to allow solid fastening of accessories.
Screw lengths should allow only 1/2" penetration
through the glass especially over the fuel tank
as noted.

- A Fuel tank cover. Thickness of wood/fiber-glass laminate is 1/2" except in Area (B).
- B Wood/fiber-glass laminate is 1" thick in this area (dimensioned as shown).
- C 4" x 96" x 1/2" plywood.
- D 15" x 22" x 1/2" plywood.
- E 4" x 120" x 1/2" plywood.
- F 4" x 70" x 1/2" plywood.
- G 18" square x 1/2" plywood.
- H 4" x 39" x 1/2" plywood.
- I 4" x 58" x 1/2" plywood.
- J 5" x 72" x 1/2" plywood.
- K Solid plywood hull width and thickness of transom.